
3M AYC INSTALLATION INSTRUCTIONS




1- The chassis is placed on a flat surface.

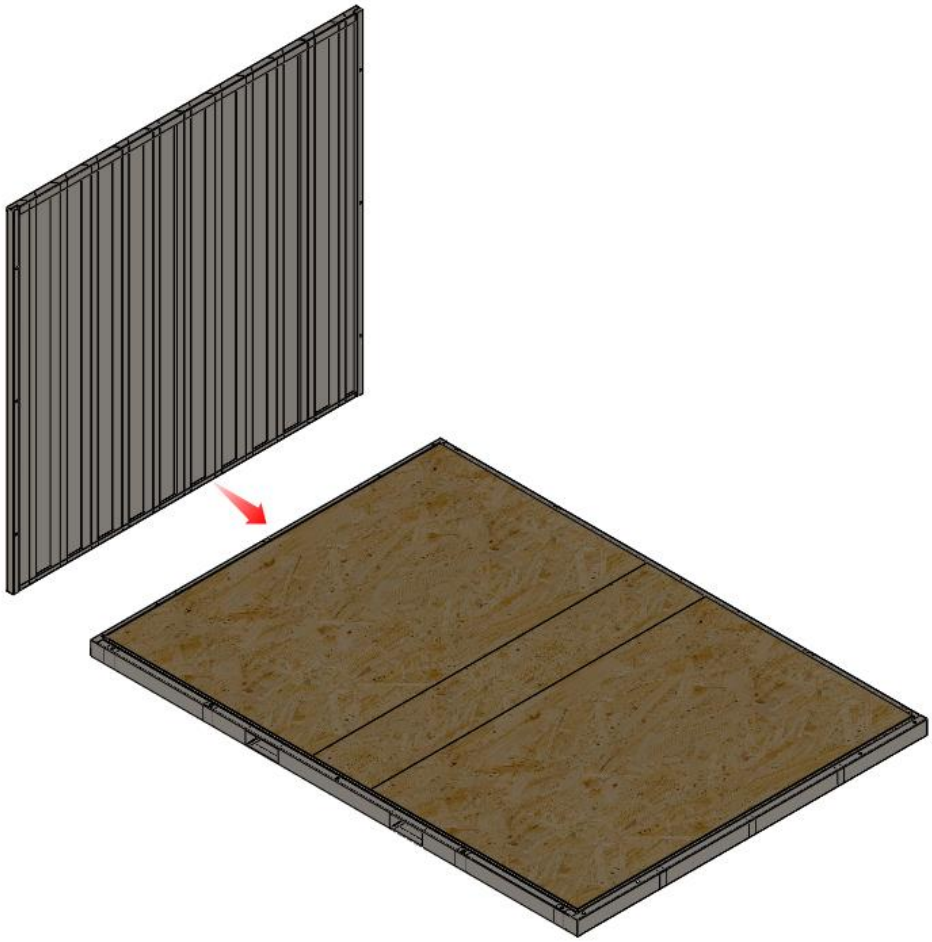



2- The installation of the panel is done with the help of bolts.



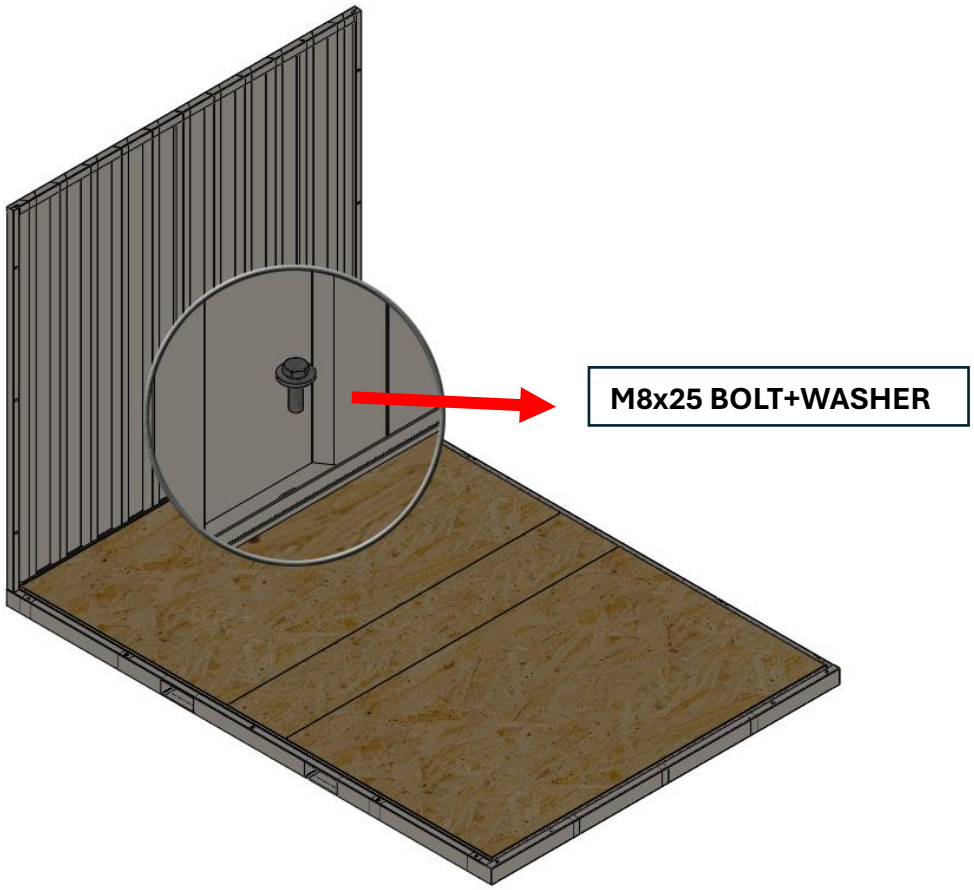


3- The side panel is mounted to the chassis and the front panel with the help of bolts.

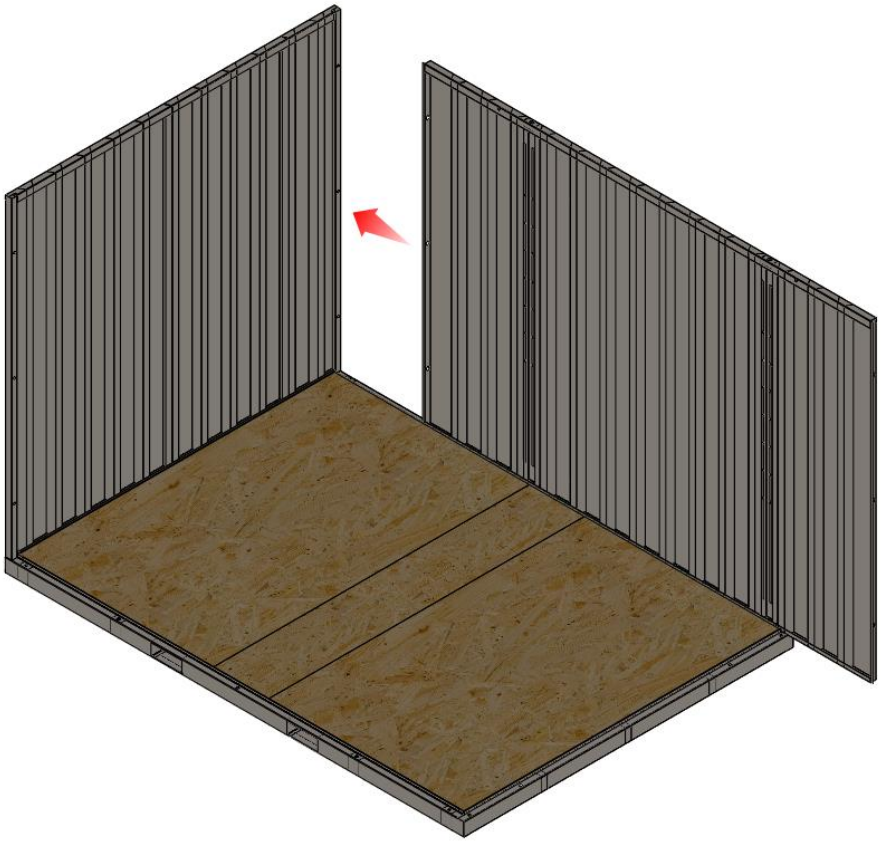

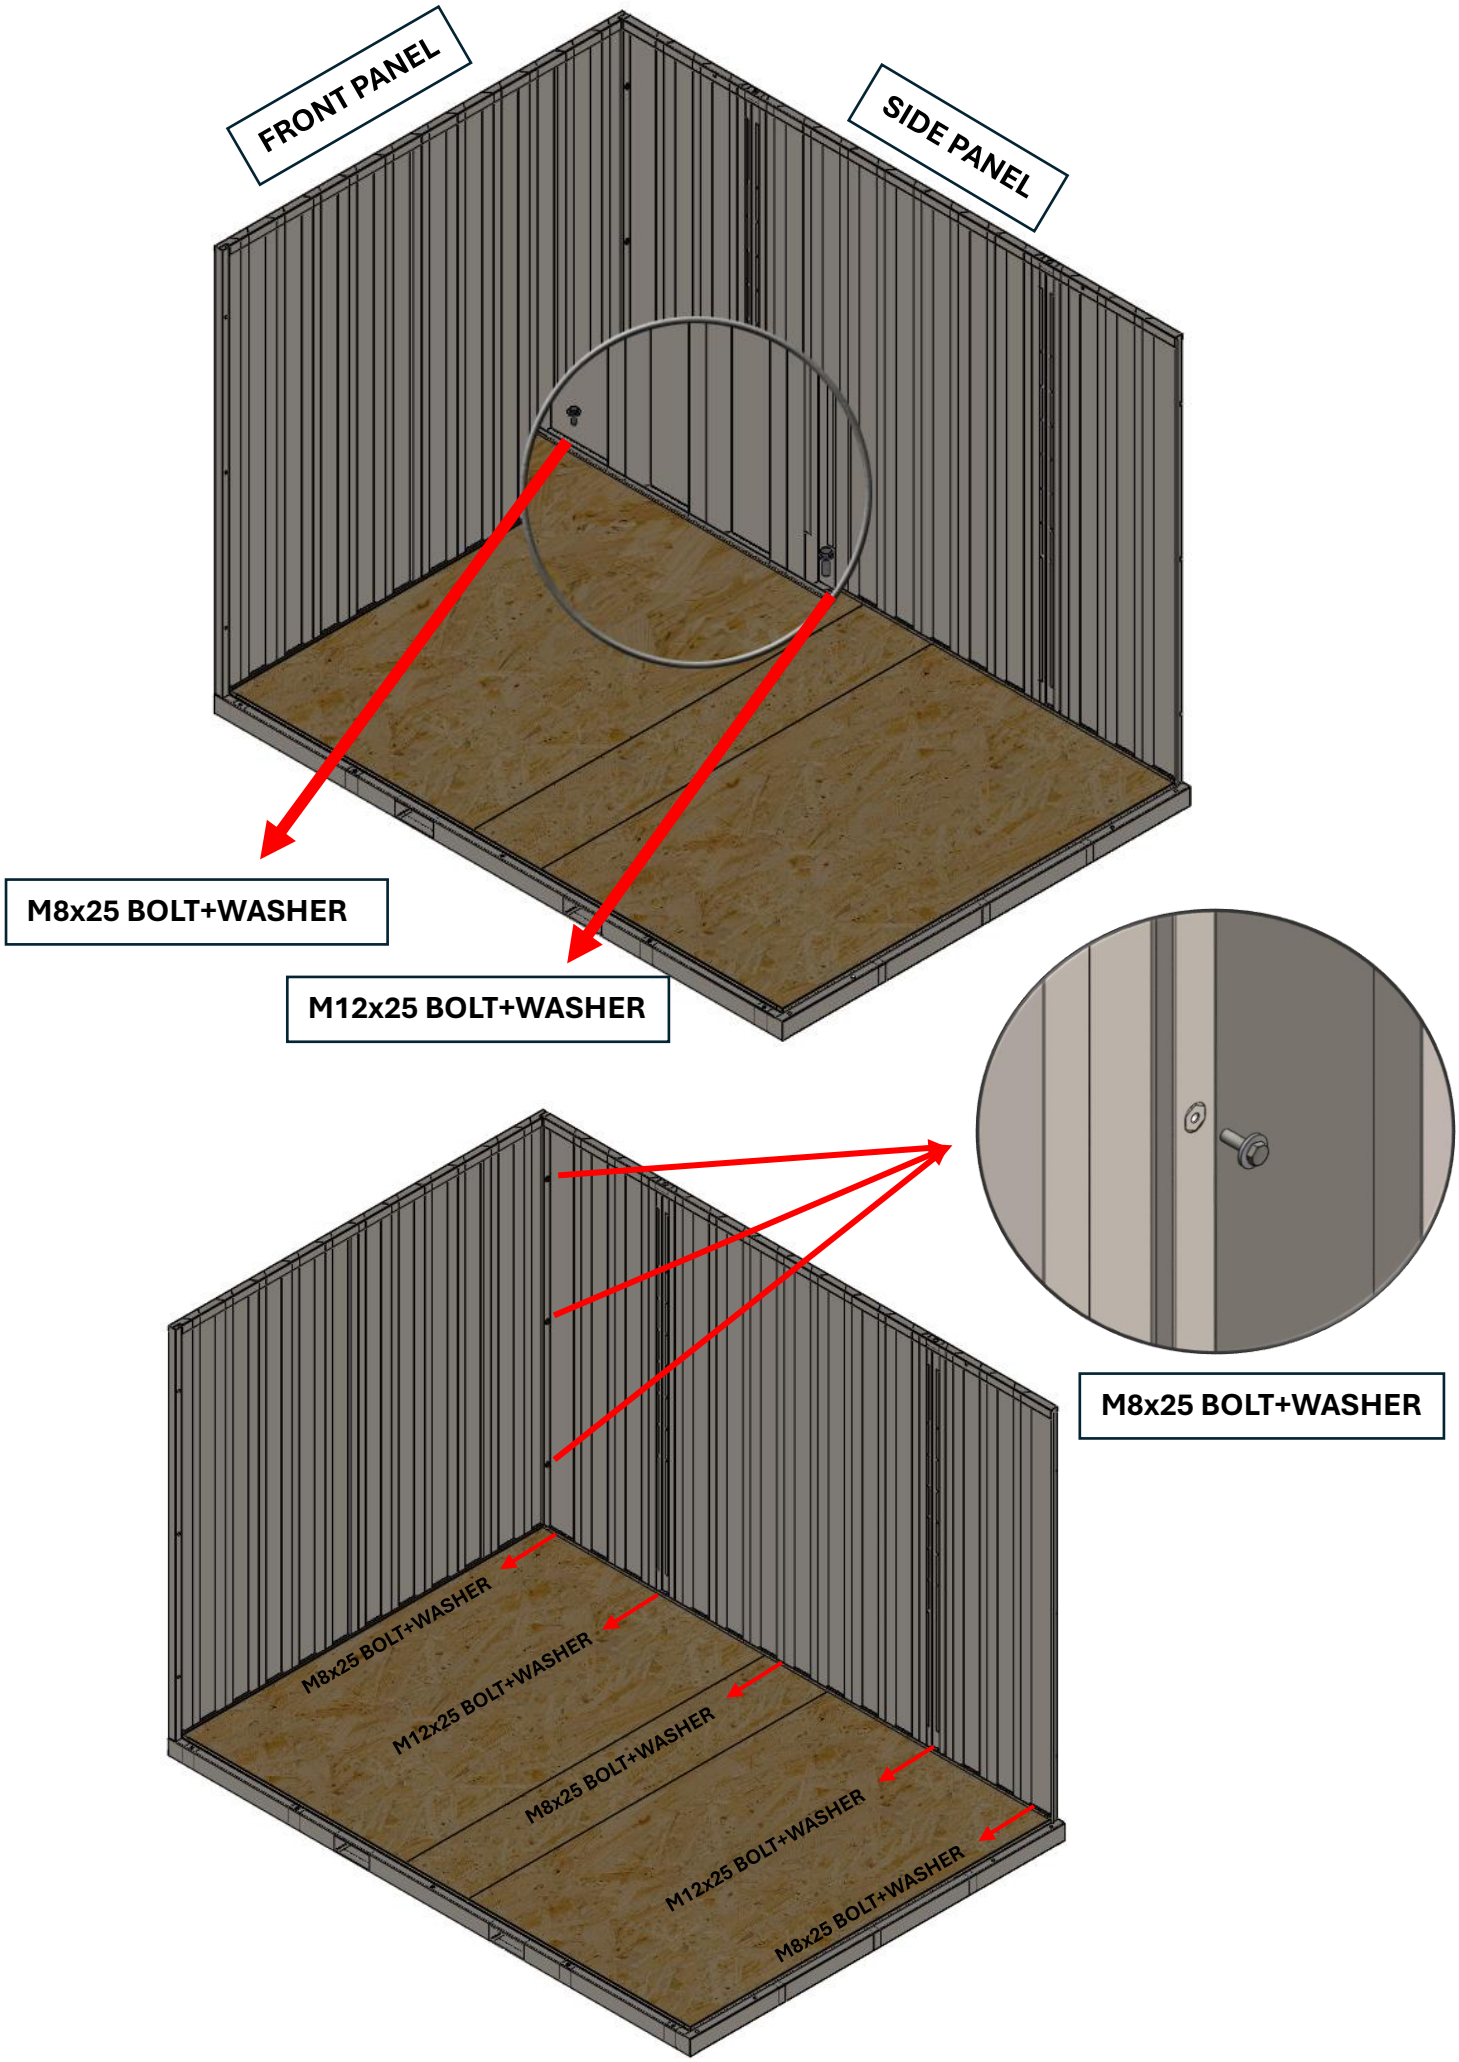

FRONT PANEL
SIDE PANEL
M8x25 BOLT+WASHER
M12x25 BOLT+WASHER
M8x25 BOLT+WASHER
M8x25 BOLT+WASHER
M12x25 BOLT+WASHER
M8x25 BOLT+WASHER
M12x25 BOLT+WASHER
M8x25 BOLT+WASHER

4- At this stage, the door panel is mounted to the front panel and chassis with the help of bolts.

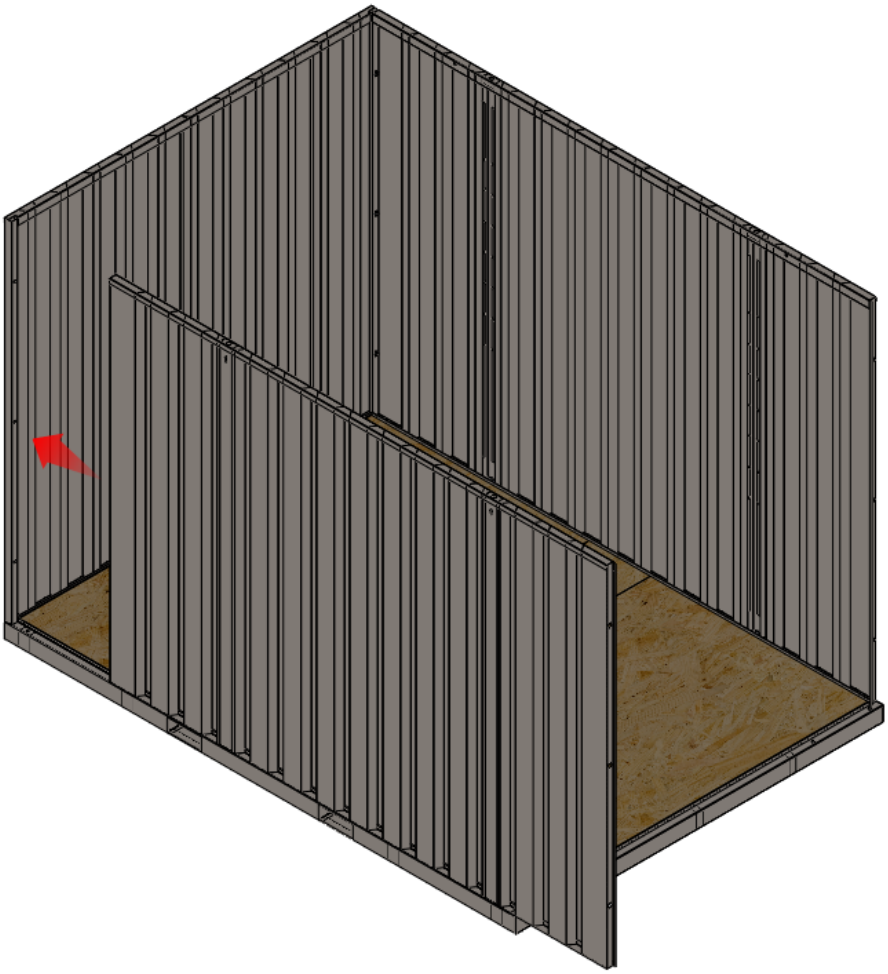






5- At this stage, the door panel is mounted to the chassis and the side panels using bolts.

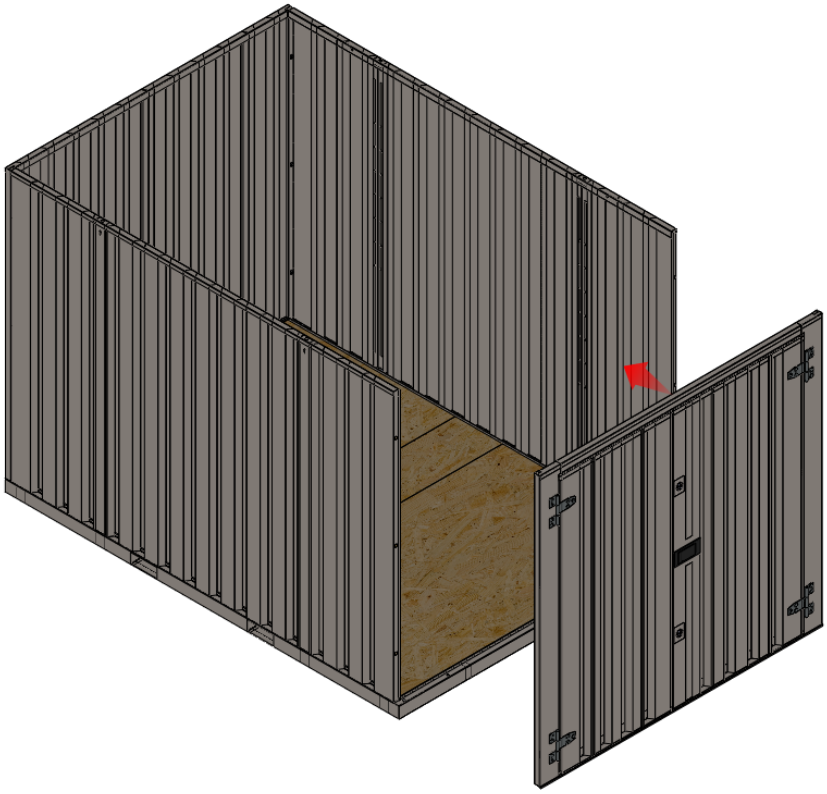

6- In this step, the roof assembly will be carried out. After the roof is placed on top of the panels, the connections between the roof and the panels will be secured using bolts and nuts.

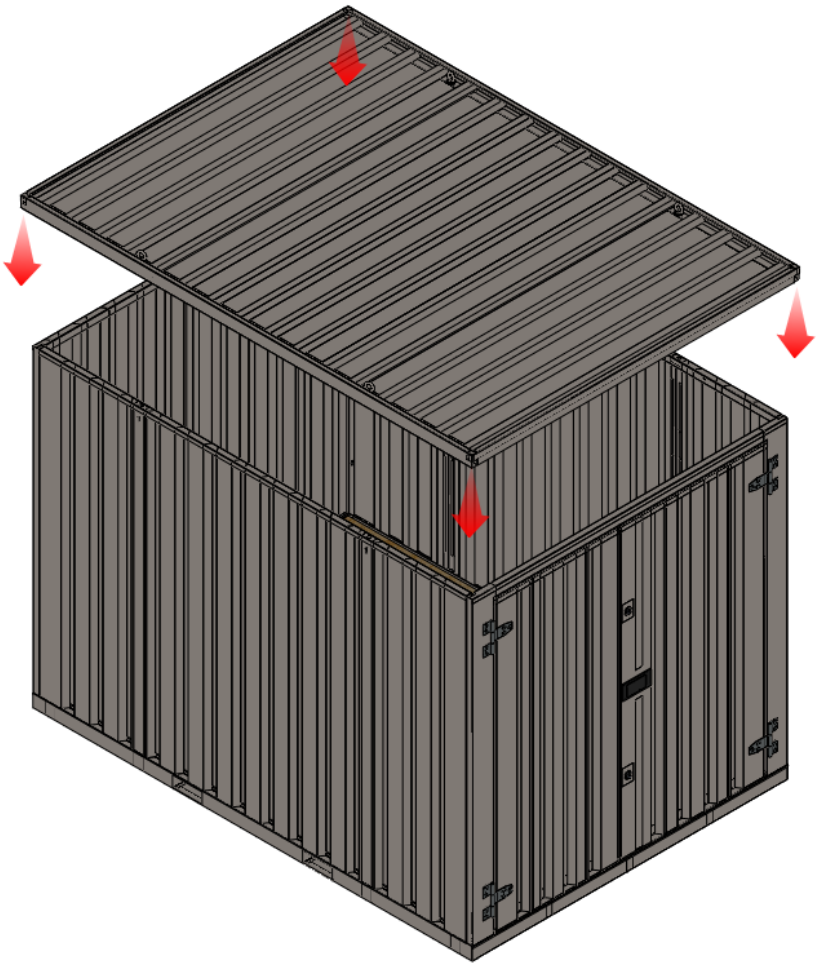

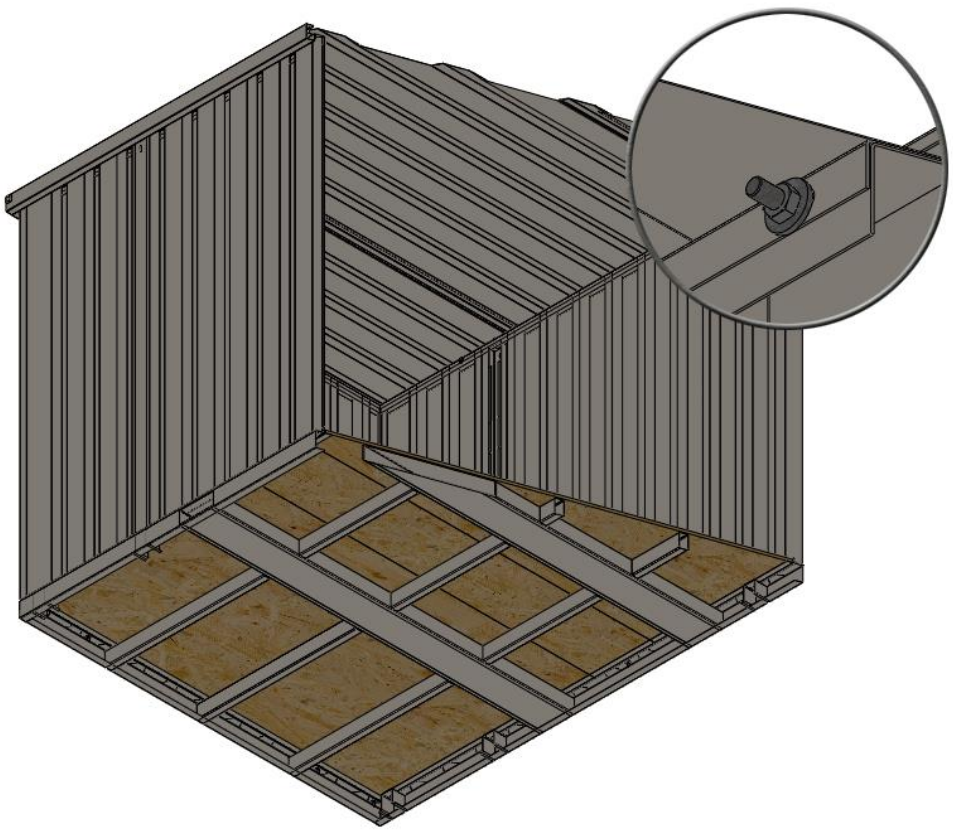

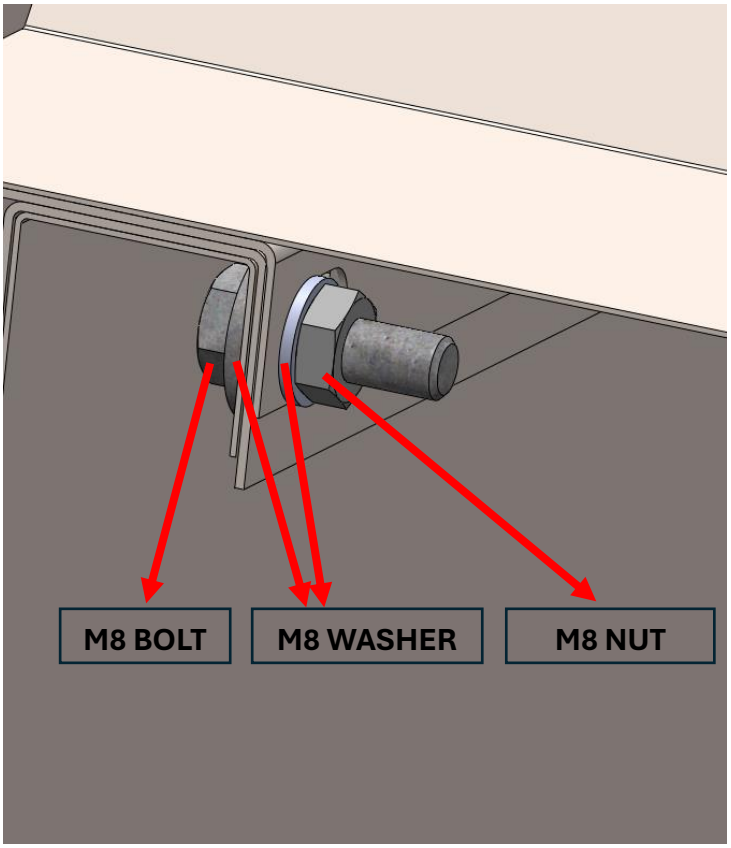
M8 BOLT
M8 WASHER
M8 NUT

3M AYC ELITE LOCK DOOR

